


System Bauer

System Bauer

Ball for weld on

Kogel voor aanlassen

Inw.dia.	Binnen A inside A	Buiten outside	B
50	49	74	70
76	76	94	98
89	89	94	120
108	107	110	145
133	132	118	159
159	156	146	179
194	192	205	230

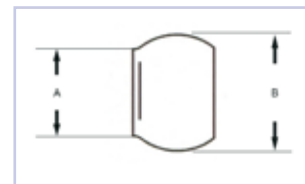


2

Lever closure ring

Sluitring voor hendel


50	62	-	-
76	89	-	-
89	113	-	-
108	133	-	-
133	150	-	-
159	170	-	-
194	248	-	-

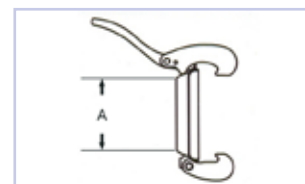

Male coupling for weld on

V-koppeling voor aanlassen

50	49	52	71
76	76	79	99
89	89	92	121
108	107	112	148
133	132	138	163
159	156	163	182
194	192	188	231

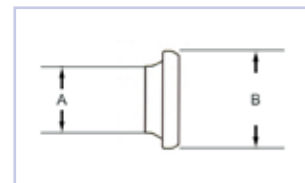

O-ring

O-ring

50	-	83	9
76	-	115	13
89	-	134	14
108	-	160	15
133	-	190	18
159	-	208	19
194	-	253	18



Passende koppelingen vindt u vanaf pagina 124!
You will find the couplings from page 124!