


### System Perrot

### System Perrot

#### Cardan bucket for weld on

#### Kardan-Becher zum Anschweißen


NW	A	B
50	50	74,5
70	70	98,5
89	89	126,0
108	108	145,5
133	133	171,5
159	159	203,5
216	216	287,0

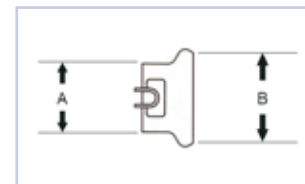

#### Male coupling for weld on

#### V-Teil zum Anschweißen


50	50	75,0
70	70	102,5
89	89	134,0
108	108	155,5
133	133	179,0
159	159	211,0
216	216	312,5

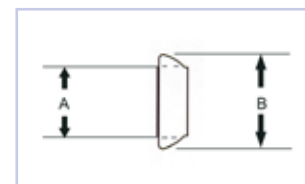

#### Female coupling with male thread

#### M-Teil mit Außengewinde


50 x 1 1/2"	48,3	74,5
50 x 2"	60,3	74,5
70 x 2 1/2"	76,1	98,5
89 x 2 1/2"	76,1	126,5
89 x 3"	88,9	126,5
108 x 4"	114,3	145,5
133 x 5"	139,7	171,5
159 x 6"	165,1	203,5

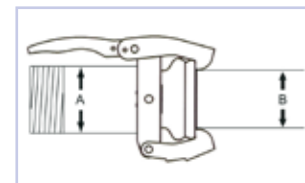

#### Male coupling with male thread

#### V-Teil mit Außengewinde

50 x 1 1/2"	48,3	50,0
50 x 2"	60,3	50,0
70 x 2 1/2"	76,1	70,0
89 x 2 1/2"	76,1	89,0
89 x 3"	88,9	89,0
108 x 4"	114,3	108,0
133 x 5"	139,7	133,0
159 x 6"	165,1	159,0

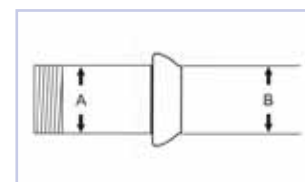

#### O-ring

#### O-Ring

50	87,0	11,0
70	108,5	11,5
89	139,0	14,0
108	160,0	18,0
133	190,0	20,0
133	190,0	22,0
159	222,0	20,0
159	222,0	22,0
216	306,0	25,0



Passende Kupplungen finden Sie ab Seite 109!  
You will find the couplings from page 109!